




1. Press Menu select button → Diagnostics

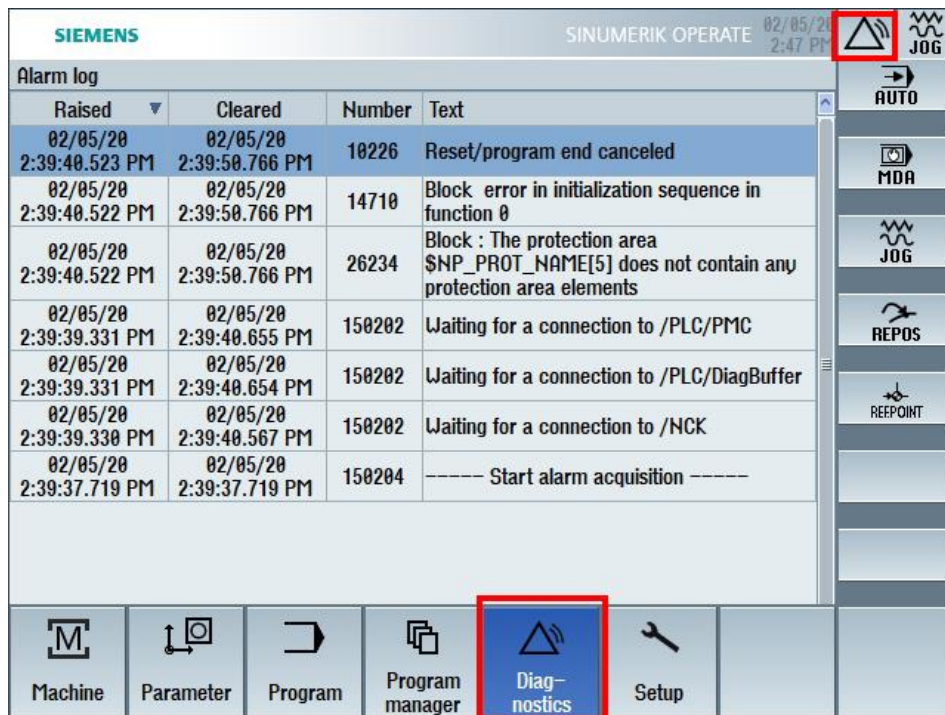

2. Press Alarm log → Save log

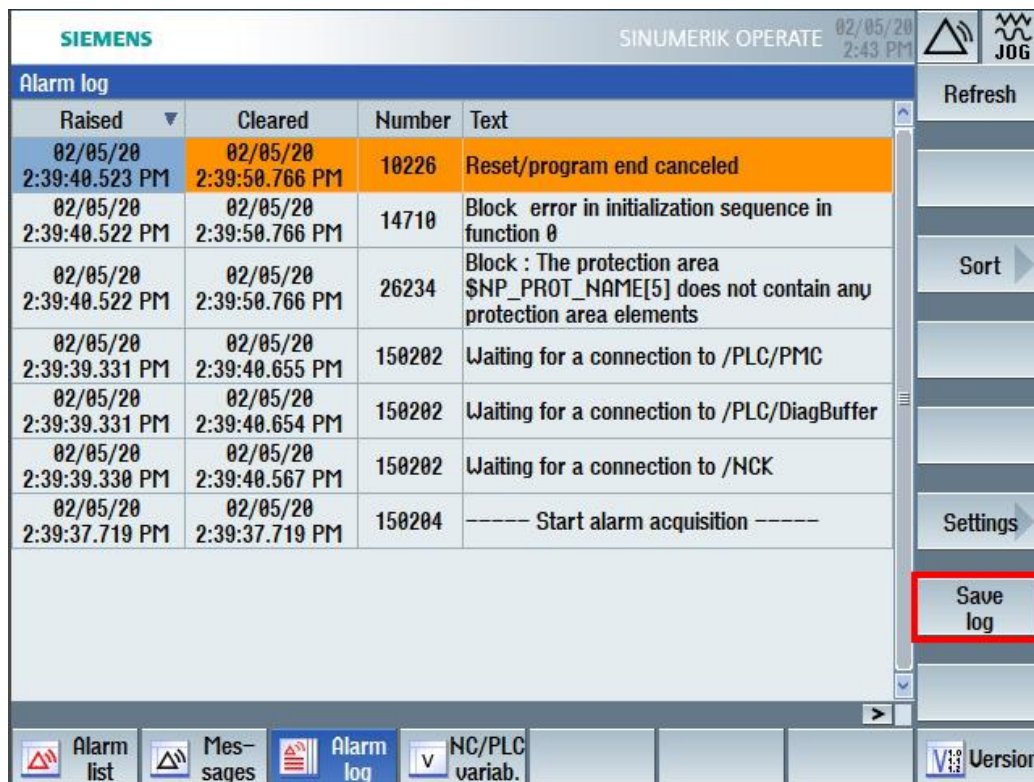

3. Press menu select button → Setup

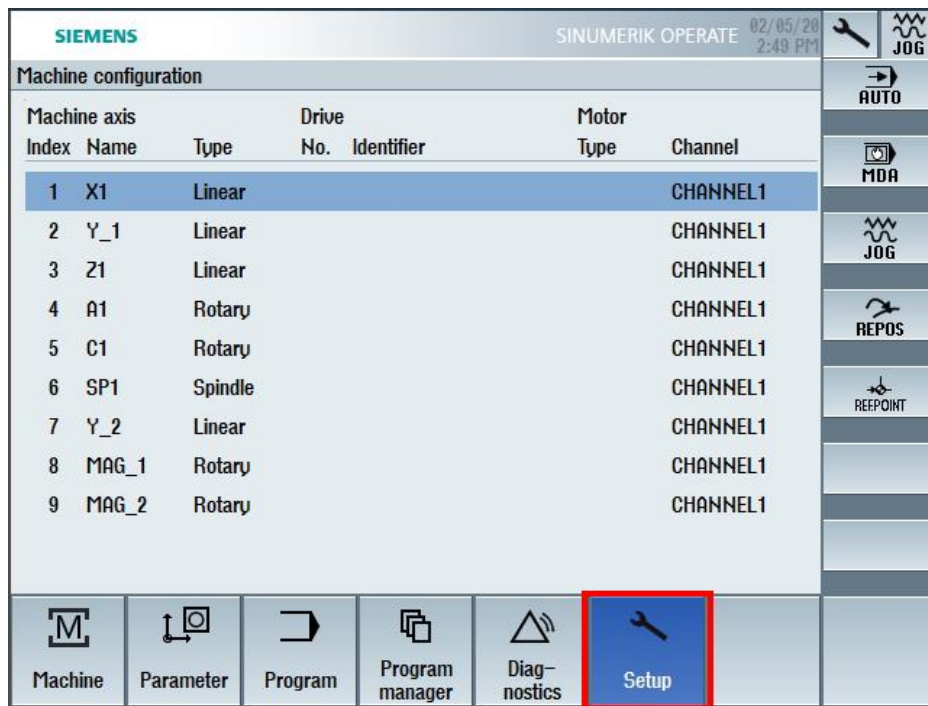

4. System data → Path: HMI data/Logs/Alarm log → Copy alarmlog.txt and paste to USB and send it to us.

